



**INSTRUCTIONS FOR INSTALLATION OF  
CYLINDER-DOUBLE CYLINDER AND CLASSROOM FUNCTIONS.**

**exterior cylinder for the  
functions of double cylinder  
and classroom**

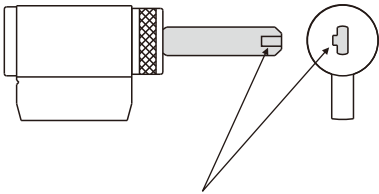

(engage tail piece to cylinder  
left groove)

**interior cylinder for the  
function of double cylinder**

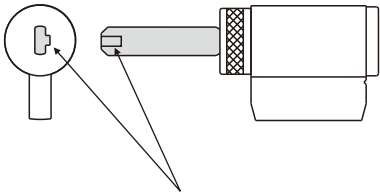

(engage tail piece to cylinder  
right groove)