


INSTRUCTION FOR INSTALLATION OF DUMMY LEVER/KNOB (TYPE 78)

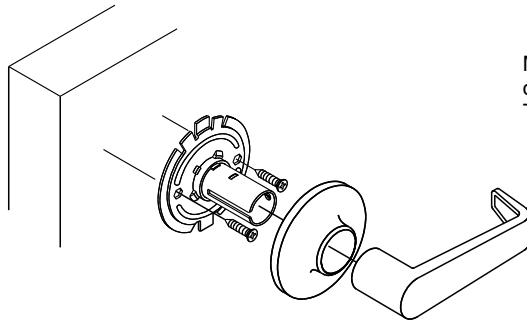

Measure 38" from bottom
of door or any suitable height.
Tighten screws to fix directly.

133x65(mm)