


# INSTRUCTION FOR INSTALLATION OF DUMMY LEVER (EV#79)

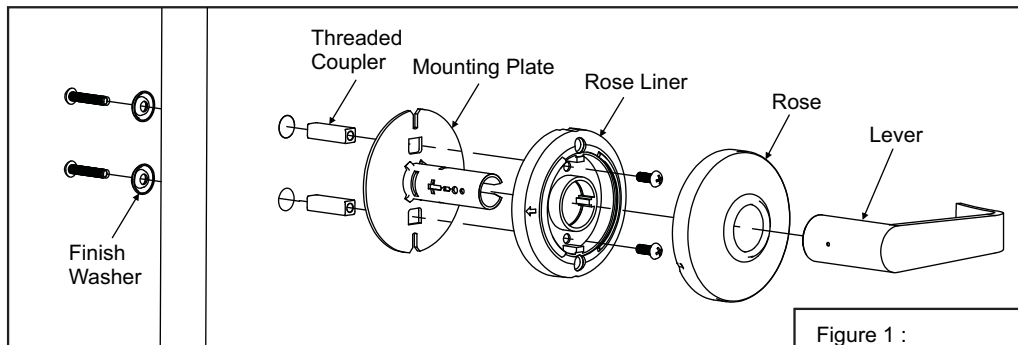


**NOTE :**  
For 1-3/8" (35mm) thick door, use 1" (25.4mm) long machine screws.

For 1-3/4" (45mm) thick door, use 1-3/8" (35mm) long machine screws.

1. Drill (2) 1/2" (12.7mm) diameter holes thru the face of the door.  
(for wood doors, drill half way thru both sides of the door to avoid splintering.)
2. Insert mounting plate through rose liner so they sit flush.
3. Tighten rose liner and mounting plate together using (2) 1/2" (12.7mm) long machine screws and (2) threaded couplers. See figure 1.
4. Place newly assembled parts on outside face of the door.
5. Tighten assembly to the door using (2) machine screws and (2) finish washers (machine screws should tighten to the threaded couplers inside drilled holes in the door).
6. Make sure both sides are completely tightened down and then install the rose over the rose liner.
7. Insert lever until it snaps securely in place.

**Figure 1 :**  
When tightened down, coupler will tighten to the rose liner. Coupler must sit in the hole of the mounting plate so that it cannot twist.

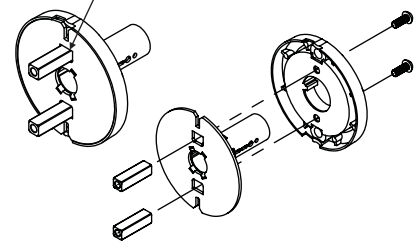

## TEMPLATE

Fit here on door edge

BACKSET 2-3/8" (60mm)

ø1/2" (12.7mm)

1-5/8" (41.2mm)

BACKSET 2-3/4" (70mm)